


WL01

Wi-Fi LIGHT BULB

QUICK START GUIDE

In the Box

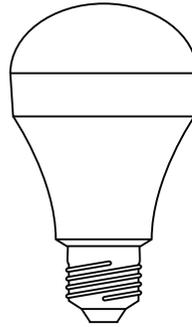

E27 White & Colour Light Bulb



QR Code Card

Getting started

1. Please check that your smart phone app is updated.
2. Please also check that your Wi-Fi router is working properly and operates on 802.11b/g/n 2.4GHz with WPA/WPA2 encryption. We also support OPEN encryption. i.e. no password

 **2.4GHz is the standard connection for most routers. Please do NOT choose 5GHz connection.**

Product Features

1. Built-in Wi-Fi module
2. Customize your light
3. Schedule up to 4 periods per day when unit is automatically turned on.
4. Life-time cloud service is included
5. Powerful APP for your Smartphone
6. Simple Wi-Fi set up with APP

Installing the APP

1. Before powering up the device, please install our free NetzHome APP onto your phone.
2. Now complete your User Profile by inputting your email address and a 6-to-20-digit password.



NetzHome




3

Setting up your DEVICE

Go to the locations in the Building where you eventually wish to use the Light Bulb. Look at your smart phone and ensure you have a good and steady WIFI connection. Exit the APP, open SETTINGS on your smart phone and click WIFI. If you just have a main Router, it will be showing its reference (or SSID). However, if you have one or more extenders, they may also be showing underneath.


VERY IMPORTANT – The device will only communicate Alarm signals to the WIFI Router or Extender that you are about to pair to so it is essential that you pair it to the closest/strongest WIFI signal/SSID.

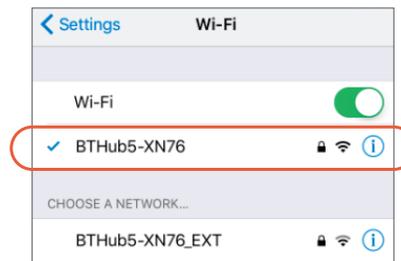

4

Setting up your DEVICE

1. Turn off the power to the lightbulb socket. Insert your Wi-Fi lightbulb into the socket and screw into place, but do NOT turn the power back on.
2. Re-Open the APP, go to "🏠" Devices section, press + and then Start
3. Ensure that the Router SSID is the same that you have just seen in your smartphone's WIFI Settings or you will not be able to pair successfully

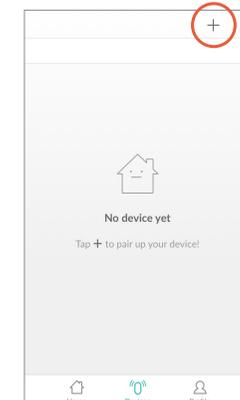

5


1

2

- Input your Wi-Fi password.
- Scan the QR code on Hang Tag or device by moving your smartphone's camera directly above the QR code. You may also input the "UDID" manually.

! Since WPS mode will not last long, make sure you finish step 6-8 as quickly as possible.


- Press the WPS button on your router (Optional but recommended)

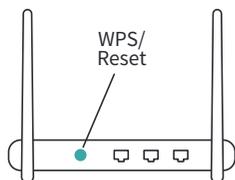

! Some RESET function is combined with WPS button on router. It is better to refer to user manual of your router.

6

- Turn on the power to your lightbulb
- Press 'Pair' and wait for network connection.
- The device will now start pairing to the router.
- When pairing is successful, a "Pair Finish" message will be shown. A new device will be shown on device page. Otherwise, please turn off the power to the light bulb and repeat from step 4.

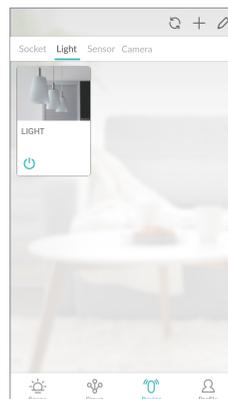

7

How To Use

Go to **Devices** section > Light Bulb column



Long press to turn the Light Bulb ON / OFF.

- Press to Add a new Device.
- Press to take you to an Editing Subsection Page:
 - Press to change the order of priority of your device list. Drag and move it to a new position in the list.
 - 1. Ensure that the free "NetzHome" APP has been installed on the other phone and complete the registration process on that phone.
 - 2. Press this symbol and select the Sensor/s you wish to share. Press "share" and complete the "Share Device to" box with the other user's email address he is using (when he registered his user profile). Press "share" again to share.
 - 3. Open the APP on that other Users Smartphone and press Profile Press "Received Device(s)". The new user can now choose whether to accept or reject those devices displayed here.

8

Press to Delete a Device from the APP

! Lost Connection
The device sends a 'heartbeat' signal to the router every 4 hours. This icon indicates that contact has been lost. Check the network used by the device OR replace batteries in case batteries are exhausted.



Short press the device to take you to the Device Page

Off Time: max. 4 schedule timers for unit automatically turned on

1.	9:00 - 12:00	
	S M T W T F S	
2.	12:00 - 15:00	
	S M T W T F S	
3.	7:00 - 23:00	
4.	7:00 - 23:00	

a/Tap on a period



b/Select time period



c/Weekly schedule


9

Light A personalized description of the device. Press to enter up to 20 characters and press OK to save.

A200XXXXXXXXXX This is the Device unique ID



Personalized Photo for the Device. Press the icon, choose "Take photo" or "From album" to create a personalized Photo

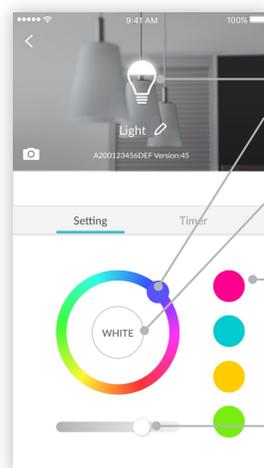

Press to turn the Light Bulb ON / OFF.

Colour Setting
Before adjusting colour, please reduce brightness to at most half of full scale.

Default White Colour

4 Preset Colours
Press to adjust colour and press OK to save.

Brightness Setting

Trouble Shooting

CANNOT PAIR THE DEVICE SUCCESSFULLY

- If there are too many Wi-Fi connections around your device, turn them off to avoid any disturbance and pair again.
- Check that the router is working properly and that it operates on 2.4GHz.
- Check that the SSID and password are correct.

DOESN'T WORK PROPERLY or LOSS OF SIGNAL ICON APPEARS ()

- Check whether the device is within coverage of your Wi-Fi router/repeater.
- Check that the router is working properly.

Tutorials: www.netzhome.com/support

10

11